


2" Top Mount Valve

Replacement Parts

Item	Part No.	Description	Qty
1	01013003	Handle (Big)	1
1	01013002	Handle (Small)	1
1	01013001	Handle (Meshy)	1
2	03018008	Pin for Handle	1
3	01181027	Washer for Handle	1
4	89280301	M6 x 32 Screw with Nut	10
5	01013158	2.0" Top Mount Valve Standard Lid (Black)	1
5	01053125	2.0" Top Mount Valve Standard Lid (White)	1
6	03014014	Spring for Valve	1
7	02011006	O-Ring for 2.0" Top Mount Valve Lid	1
8	02011022	O-Ring for Valve Rotor	2
9	01181002	Washer for Spring	2
10	01021002	2.0" Valve Rotor	1
11	02311003	Spider Gasket	1
12	01013027	2.0" Top Mount Valve Bottom Body (Black)	1
12	01051031	2.0" Top Mount Valve Bottom Body (White)	1
13	01013029	2.0" Water Tube	1
14	01013030	2.0" Diffuser	1
14	01019003	2.0" Diffuser (Only for TMG)	1
15	02011005	O-Ring for Diffuser	1
16	02020016	O-Ring for Connector	6
17	01013031	2.0" Connector (Black)	3
17	01051033	2.0" Connector (White)	3
18	01171154	2.0" Union (A/E)	3
19	01013032	2.0" Union Nut (Black)	3
19	01051032	2.0" Union Nut (White)	3
20	89280104	Sight Glass with O-Ring	1
21	89280120	Drain Plug Fitting with O-ring	1
22	89021307	Drain Plug with O-ring	1
23	06011029	Oil Pressure Gauge with O-ring	1
23	06021013	Plastic Pressure Gauge with O-ring	1
24	01019002	Height Extension (Only for TMG)	1

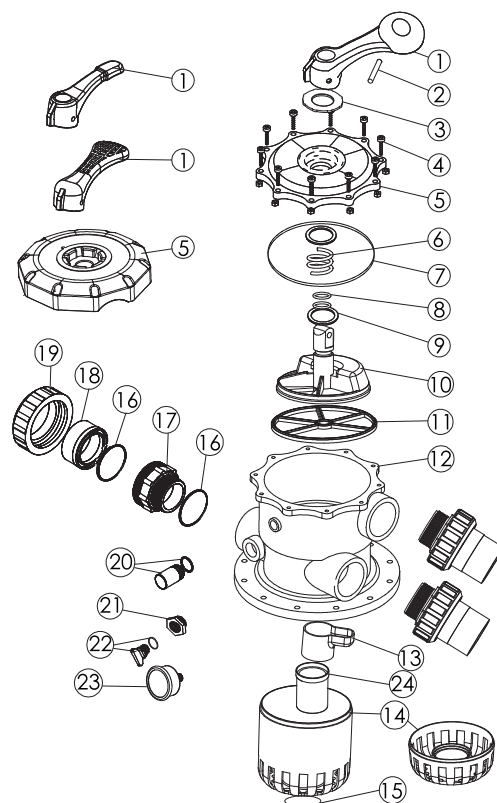

NOTE:

Item 1-15, 20, 21, 22 for Valve only (88280306).
Item 1-24 for Valve (88280351).

WARNING



TURN PUMP OFF BEFORE CHANGING VALVE POSITION.



THIS FILTER OPERATES UNDER HIGH PRESSURE. WHEN ANY PART OF THE CIRCULATING SYSTEM (e.g., CLAMP, PUMP, FILTER, VALVES, ETC.) IS SERVICED, AIR CAN ENTER THE SYSTEM AND BECOME PRESSURIZED. PRESSURIZED AIR CAN CAUSE THE LID OR VALVE TO BE BLOWN OFF WHICH CAN RESULT IN SEVERE INJURY, DEATH, OR PROPERTY DAMAGE.




TO PREVENT DAMAGE TO THE PUMP AND FOR PROPER OPERATION OF THE SYSTEM, CLEAN PUMP STRAINER AND SKIMMER BASKETS REGULARLY.

FUNCTIONS OF VALVE POSITIONS

Valve Position	Function
FILTER	Normal Filtration
BACKWASH	Cleaning Filter by reversing the flow
RINSE	Used after backwash to flush dirt from valve
WASTE	By-passes filter, used for vacuuming to waste or lowering water level
RECIRCULATE	By-passes filter for circulating water to pool
CLOSED	Shuts off all flow to filter or pool


FILTER

WASTE

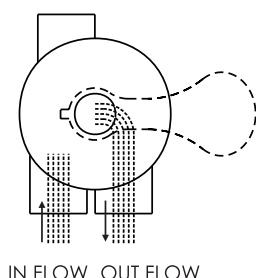


WASTE

WASTE

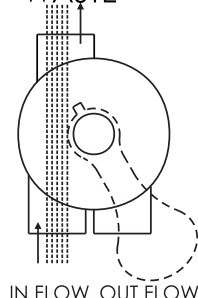


CLOSED

WASTE

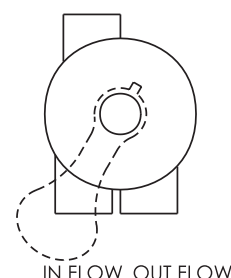


BACKWASH

WASTE

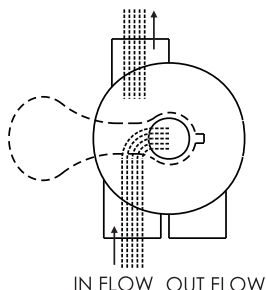


RINSE

WASTE

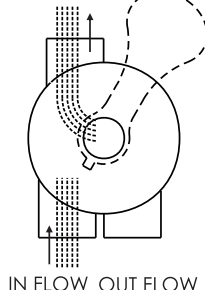

RECIRCULATE

WASTE

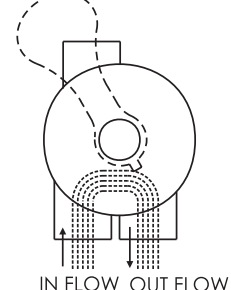

GENERAL

- 1) Pipe tap boss provided for optional influent pressure gauge.
- 2) SERVICING VALVE(Stop pump,close gate valve in suction&discharge before proceeding):
 - a) Set handle in filter position.
 - b) Remove cover screws.
 - c) Lift cover and key assembly out.

TO ASSEMBLE:

- d) Place valve key so that wedge opening is at TOP port (handle in Filter psn.). Flat edge of cover screw lug should align with flat edge of body screw lug.
- e) Position cover O'Ring.
- f) Secure assembly to body with cover screws. Tighten cover screws evenly and alternately. Do not over-tighten.